Sound Card **Neo GS**. Revision C

NedoPC group. 2010

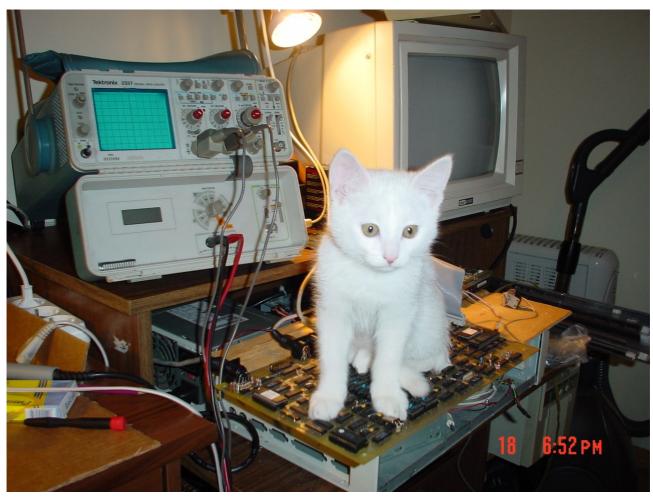


Table of Contents

| Description | 2 |
|-----------------|---|
| Install | |
| Use | |
| Check the NeoGS | |
| Tune | 3 |
| Software | 3 |
| Documentation | 3 |
| Service | 4 |
| Project status | 4 |
| About | |
| | |
| | |

(version 6. Nov. 2012) www.nedopc.com

Description.

Sound card designed for playing MOD and MP3 music files. Sound card not use computer resources via playing.


Sound card designed for using in spectrum compatible computer with ZXBUS slot.

Sound card compatible with General Sound and support programs for General Sound.

Features:

- 4Mb RAM and 512Kb ROM;
- SD card reader;
- Additional turbo-mode for processor (20MΓμ);
- MP3-decode chip MA8201A-U(compatible with vs1011);
- 8-sound channels by hardware;
- Easy firmware upgrade.

Install

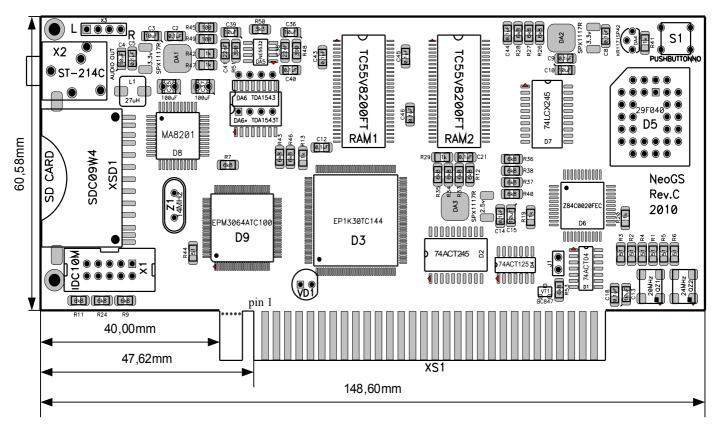

Sound card designed for installing to ZXBUS board. First pin placed on left side of board (on top side with parts of board, see picture). Sound cards board has key (near first pin, see picture) for easy installing to slot.

Warning! Power off before install or remove sound card to/from main-board.

Warning! Not use extremely force via installing board. It may to destroy connector of sound card or slot of main-board.

Warning! Please install sound card to slot on right direction. If install NeoGS on incorrect direction then NeoGS or main-board may be malfunction.

Warning! Installed sound card must not contacted with other cards or case sides. If NeoGS contacted to other card then please isolate NeoGS.

Warning! Please sure then contacts of NeoGS not shifted to main-boards slot contacts.

Warning! Power off before connect speakers or amplifier to sound card.

Use

Check the NeoGS

You can to check the NeoGS via Basic program:

10 OUT 187,244

20 PAUSE 100

30 PRINT IN 179

Must displayed value 126.

Tune

NeoGS board has jumper J1 (placed on top side of board, in right-down, down to processor). Jumper regulate NeoGS reaction to "reset" signal from main-board:

- J1 short NeoGS reset if signal come from main-board;
- J1 open NeoGS not react if signal come from main-board.

Software

NeoGS started to compatible with **General Sound** mode. Can to use any software for **General Sound** in this mode.

Software, whose work in other modes of NeoGS (for example MP3 player), set NeoGS to non-compatible with **General Sound** state. Recommended to reset NeoGS after using this software via **NeoGS-reset** button (placed on top side of board, in right-up, see picture) or via software reset.

New firmware available from site www.nedopc.com.

Documentation

Hardware sources and programming manual available from site www.nedopc.com.

Service

Sound card NeoGS shipped ready to use.

All sound cards tested on ZX-Evolution computer.

Supplier decline all responsibility in any cases.

Project status

Project is open source.

Please coordinate NeoGS production questions with authors.

About

Authors: Vadim Akimov (LVD), Roman Chunin (CHRV), Vyacheslav Savenkov (Savelij), Aleks Ghabin (KOE), Vasily Klimov (JTN).

Site: http://www.nedopc.com

NeoGS page: http://www.nedopc.com/gs/ngs_eng.php

Catalog: http://www.nedopc.com/catalog.php

Thanks to:

Evgeny Muchkin — for information about General Sound and for coordinating author rules.